

Micro fine dust filterbag included in delivery



PVC-hoses available as accessories



Automatic starting device AS-100, available as accessory

MADE IN GERMANY

Wassermann is a medium-sized, owner-operated company with head office in Hamburg. We design and produce high-quality technical devices in Germany. Our main users are dental laboratories, dental clinics and various industrial areas worldwide.

Why a Wassermann product?

Wassermann products are manufactured from high-quality materials and the proportion of plastics used is intentionally kept as low as possible. Our devices are known for their suitability for daily use, functionality and longevity. As a result, the users place high levels of trust in the Wassermann brand. We feel it is our duty to support our customers on a daily basis when it comes to safety, service and productivity. Technological perfection, optimum quality and especially

sustainability are the benchmarks we set. Thanks to the combination of these values, the family-owned company, since its establishment in 1927, has gained worldwide recognition as a manufacturer of high-quality products.



Further information are available on our website at **www.wassermann.hamburg**



/WassermannDentalmaschinen





SG-1/1




Wassermann Dental-Maschinen GmbH Rudorffweg 15–17 · 21031 Hamburg · Germany Phone: +49 (0)40 730 926-20/ -24 · Fax: +49 (0)40 730 37 24 export@wassermann-dental.com · www.wassermann.hamburg www.facebook.com/WassermannDentalmaschinen

Suction Unit SG-1/1

The 1-place-suction **SG-1/1** works with Wassermann's reliable low pressure principle; i.e. with suction at very low air speed. The advantage: Relaxed to work with because of its low noise. A further advantage is the high suction volume, where the hands will not become cold even in continuous use. The fan motor is a maintenance-free squirrel-cage motor, suitable for continuous operation and almost free from wear. Not included, please order separately:

PVC-hose Ø 75 mm, various lengths available, see flyer "Accessories for suction technology"

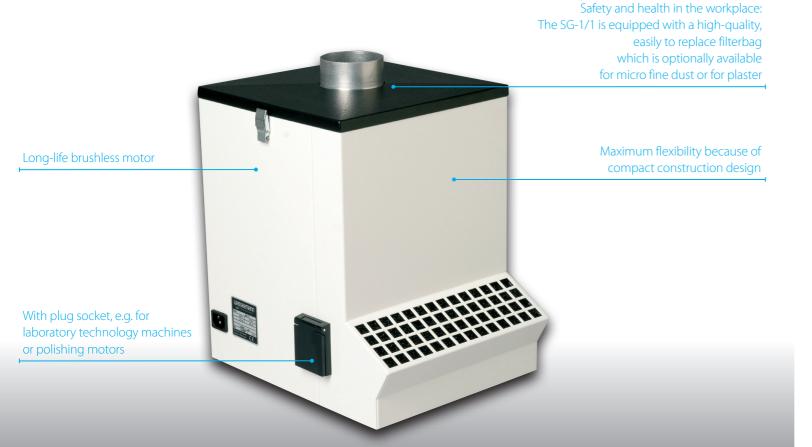

Major Features

- 1-place-suction that works with the low pressure principle, multifunctional use – from polishing trough to fine blasting units
- Low noise operation, suitable for continuous operation
- Wide range of accessories available, recommended special accessory SG-1/1: Automatic starting device AS-100 for the automatic start of suction units
- Included in delivery:
 Supply line with switchable shock proof plug
 Micro fine dust filterbag (yellow), dust class M

Accessories	Item no.
Automatic starting device AS-100	143100
Spare micro fine dust filterbag (yellow), dust class M,	611010
1 set = 4 pieces	
Spare filterbag for plaster (white), class 1 / class 2	611018
1 set = 4 pieces	

For further accessories (e.g. PVC-hoses) please see flyer "Accessories Suction Technology".

SG-1/1	Item no. 140995
Voltage	220-240 V / 50/60 Hz
Power consumption	0.75 A
Plug socket power consumption	max. 8 A
Output	170 W
WxHxD	260 x 400 x 330 mm
Weight	9.9 kg
Sound level	59 dB(A)
Suction capacity	500 m ³ /h (free-blowing)
Extractor nozzle	Ø 75 mm exterior