

**MADE IN GERMANY**

Wassermann is a medium-sized, owner-operated company with head office in Hamburg. We design and produce high-quality technical devices in Germany. Our main users are dental laboratories, dental clinics and various industrial areas worldwide.

**Why a Wassermann product?**


Wassermann products are manufactured from high-quality materials and the proportion of plastics used is intentionally kept as low as possible. Our devices are known for their suitability for daily use, functionality and longevity. As a result, the users place high levels of trust in the Wassermann brand. We feel it is our duty to support our customers on a daily basis when it comes to safety, service and productivity. Technological perfection, optimum quality and especially sustainability are the benchmarks we set. Thanks to the combination of these values, the family-owned company, since its establishment in 1927, has gained worldwide recognition as a manufacturer of high-quality products.



**Timobil**



**Suction Unit**

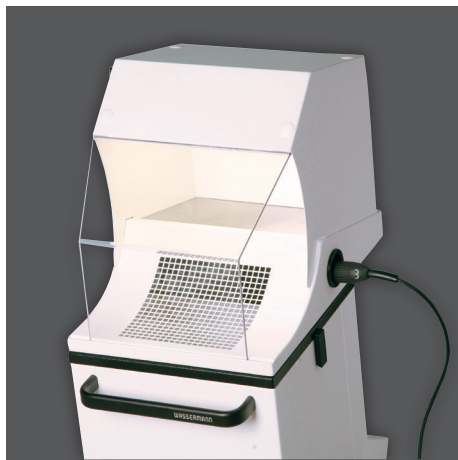

Timobil with accessory extractor hood with illumination



Timobil with accessory extractor hood



Extremely powerful motor handpiece with a constant speed and very low noise



Further information are available on our website at [www.wassermann.hamburg](http://www.wassermann.hamburg)



/WassermannDentalmaschinen

Your Dental Dealer \_\_\_\_\_

Wassermann Dental-Maschinen GmbH  
 Rudorffweg 15-17 · 21031 Hamburg · Germany  
 Phone: +49 (0)40 730 926-20/ -24 · Fax: +49 (0)40 730 37 24  
 export@wassermann-dental.com · www.wassermann.hamburg  
 www.facebook.com/WassermannDentalmaschinen

# Suction Unit **Timobil**

Mobile Suction Table with Motor Handpiece

With the **Timobil** you have a mobile suction table with robust and ergonomic motor handpiece at your disposal which leaves absolutely nothing to be desired, neither at the dentist's office nor at the dental laboratory: Because of the automatic activator switch the Timobil can be conveniently controlled by the ergonomic and vibration-free motor handpiece.

Detachable safety screen  
in front of the work area

Suction unit can be started by the motor handpiece  
with high rotation accuracy and brushless motor

Mobile, maintenance-free and  
almost free from wear suction unit  
for the dentist's office and the dental laboratory,  
long durability because of the brushless motor



## Major Features

- Works with the low-pressure principle: No heat eduction, no cooling of hands, high suction volume, virtually noiseless operation
- High protection because of run-on device of suction unit
- High quality filterbag, easily to be changed
- The extractor hood with or without illumination (available as accessories) can be retrofitted
- **Included in delivery:**  
Motor handpiece  
Rest for handpiece  
Safety screen, acrylic glass  
Micro fine dust filterbag (yellow), dust class M

Accessories	Item no.
Extractor hood	149130
Extractor hood with illumination	149140
Storage tray	149010
Spare micro fine dust filterbag (yellow), dust class M, 1 set = 4 pieces	611010
Spare filterbag for plaster (white), class 1 / class 2, 1 set = 4 pieces	611018

Timobil	Item no. 149999
Voltage	220–240 V / 50/60 Hz
Power consumption	1.5 A
Plug socket power consumption	max. 8 A
Output	350 W
W x H x D	530 x 900 x 480 mm
Weight	28.1 kg
Suction capacity	500 m <sup>3</sup> /h (free-blowing)
Control unit output	160 W
Handpiece motor output	95 W
Handpiece motor speed	1000 – 40 000 min <sup>-1</sup>
Duty	S6 (4 min. / 10 min.)